

ROLLER FLY SCREEN OPERATION AND MAINTENANCE INFORMATION

Using the pull cord or handles gently pull downwards on the base bar to extend the mesh to the base of the side guides. Lock the base bar into the side guide clips to hold the mesh in place.

To open the screen release the base bar from the side guide clips and keeping hold of the base bar let the mesh retract back into the cassette. **DO NOT LET GO OF THE BASE BAR AS THE MESH WILL SPRING BACK INTO THE CASSETTE CAUSING POSSIBLE DAMAGE AND INJURY.**

To prevent the mesh from retracting too quickly you can specify the optional brake which will reduce the return pressure.

If you have the chain operated model then the operation for closing the screen is the same as the spring retraction model. To open the screen use the chain.

PRODUCT NAME - Roller Fly screen - PREM45

GENERAL - This is a spring loaded retractable fly screen.

The mesh is PVC coated fibreglass and the casings are polyester coated Aluminium.

CLEANING - To clean the casings use a non abrasive general purpose cleaning agent.

The mesh should be vacuumed on a weekly basis to remove any dust and pollen and the tracks should be vacuumed to remove any debris. If there is any build up of grease on the mesh then our specialist cleaning fluid PRC should be used, contact us on 01254 386776.

COSHH - Not Applicable

WARRANTIES - Five years on all casings and internal workings, the mesh is excluded from this warranty. Full warranty details are available on request.

MANUFACTURER - In case of damage please contact;

Premier Environmental Ltd
P.O. BOX 112
Accrington
BB5 2GS
Tel: 01254 386776